

PM—1532

Revised: 7-25-52


46-B: Lathe Instruction Sheets



12" WOODWORKING LATHE

Operating and Maintenance Instructions

SPEED CHART

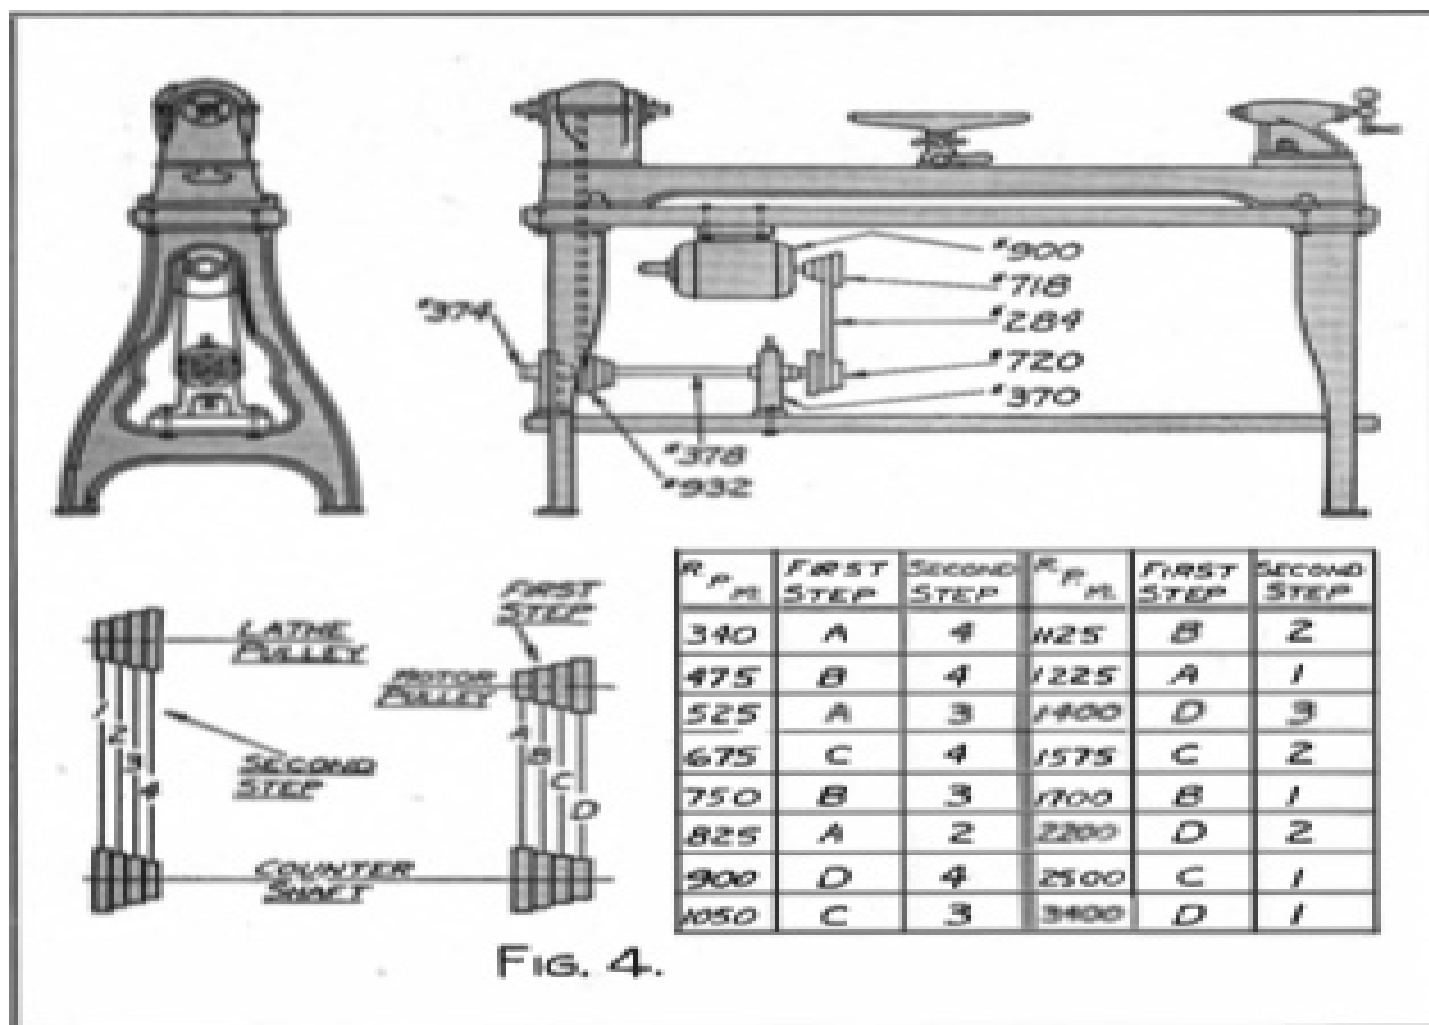

The right is reserved to make changes in design or equipment at any time without incurring any obligation to install these on machines previously sold, and to discontinue models of machines, motors or accessories at any time without notice.

Foreign distribution is through TAUCO EXPORT CORPORATION, 38 Pearl St., New York 4, New York, to Puerto Rico and the Canal Zone and to all foreign countries except Canada and the Philippine Islands.



Distribution in the United States, its possessions except Puerto Rico and the Canal Zone, and in Canada and the Philippine Islands is by authorized Delta Dealers.