



REPLACEMENT PARTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 1	402-09-354-0012	Guard Assembly, Incl:	56	901-06-120-3032	#6-.32 x 5/8" Rd Hd Screw
2	402-09-054-0013	Upper Guard	57	438-01-017-0140	Switch Assembly, Incl:
3	1231572	10-24 x 1/2" Rd Hd Screw	58	400-06-068-0002	Switch Key
4	1231572	3/16" Nylon Washer	*	402-09-377-0003	Quill Assembly, Const. of:
5	901-02-010-0541	#10-24 x 3/4" Rd Hd Screw	59	904-15-010-7411	Retaining Ring
6	402-09-089-0003	Support	60	1086894	Bearing
7	1231573	#10-24 Lock Nut	61	928-06-020-7382	Loading Spring
8	402-09-137-0006	Nameplate	62	402-09-077-0002	Quill
9	402-09-054-0015	Lower Guard	63	902-07-020-7176	Bearing Nut
10	901-01-060-0605	5/16-18 x 1/2" Hex Hd Screw	64	402-09-025-0001	Chuck
11	904-01-010-1604	5/16" Flat Washer	64A	65-112	Key
12	49-034	V-Belt (4 1/2" O.C.)	65	402-09-385-0003	Spindle Assembly, Incl:
13	41-702	Motor Pulley, Incl:	66	1086894	Bearing
14	901-04-190-0201	5/16-18 x 5/16" Hex Soc Set Screw	67	904-15-010-7410	Retaining Ring
15	438-02-314-1032	Motor	68	908-00-000-3769	Special Gasket
16	438-01-004-0043	Motor	69	402-09-314-0004	Stop Collar, Incl:
17	1087211	Cable Clamp	70	901-04-090-0112	Stop Rod, Incl:
18	901-11-020-0834	Motor Plate	71	402-09-408-0001	5/8" Hex Nut
19	429-01-302-0142	5/16-18 x 3/4" Carriage Bolt	72	902-01-020-9103	3/8-16 Hex Nut
20	904-01-010-1620	Cable Assembly	73	15-801	Table Assembly, Incl:
21	902-01-010-1300	5/16" Flat Washer	74	402-09-067-0006	Ball Crank Handle
22	1201531	5/16-18 Hex Nut	75	902-01-010-5437	7/16-14 Hex Nut
23	1202117	Rubber Bumper	76	15-806	Column (Floor Model)
24	928-01-021-4110	Stop	77	15-804	Support Assembly, Incl:
25	904-01-031-2945	Special Washer	79	15-010	7/16-14 x 3 1/2" Hex Hd Screw
26	905-01-010-3734	5/16 x 1" Roll Pin	82	901-01-060-0641	Base Assembly, Incl:
27	402-09-357-0023	Head Assembly, Incl:	83	402-09-305-0001	3/8-16 x 1/2" Hex Soc Set Screw
28	901-01-060-0632	7/16-14 x 2 3/4" Hex Hd Screw	84	901-04-150-1112	1/2-13 x 1 1/2" Hex Hd Screw
29	402-09-027-0001	Clamp	85	902-01-060-0616	1/2-13 Hex Nut
30	901-04-260-1507	5/16-18 x 1 1/4" Thumb Screw	86	402-04-027-5005	Clamp Assembly, Incl:
31	1230047	Power Cord	87	901-11-020-0806	5/16" Lockwasher
32	904-01-010-1606	Retaining Ring	88	904-02-010-1703	Guard Assembly, Incl: (Early Models Only)
33	401-95-067-0001	7/16" Flat Washer	89	902-01-010-1300	Upper Guard
34	402-09-406-0011	Rod	90	402-09-054-0010	Lower Guard
35	901-04-260-1507	Pinion Shaft, Incl:	91	402-09-629-0008	Latch Kit
36	904-01-103-1317	3/8-16 x 3/4" Thumb Screw	92	402-09-137-0092	Nameplate
37	402-04-068-5001	Fiber Washer	93		
38	901-03-013-1026	Ball Crank	94		
39	902-01-200-9706	1/4-20 x 1 3/4" Fil Hd Screw	95		
40	402-04-320-5002	Special Nut	96		
41	902-01-020-1227	Pinion Spring Assembly			
42	926-04-992-5540	1/2-20 Hex Nut			
43	402-04-130-5002	SlO-Speed Spindle Pulley, Const. of:			
44	904-01-031-4971	Pulley			
45	901-02-010-0555	Special Washer	*	15-815	Hi-Speed Conversion Kit, Const. of:
46	402-02-051-5002	#8-32 x 3/8" Rd Hd Screw	100	49-168	V-Belt
47	1220881	Gear	*	926-04-991-2315	Hi-Speed Spindle Pulley, Const. of:
48	438-01-011-0004	Bearing Assembly	101	402-04-130-5003	Pulley
49	901-04-150-0217	Insulator	102	904-01-031-4971	Special Washer
50	402-04-031-5004	Switch Opening Cover	103	901-02-010-0555	#8-32 x 3/8" Rd Hd Screw
51			104	402-02-051-5002	Spindle Shaft
52			105	1202434	Bearing Assembly
53					
54					
55					

NOT INCLUDED WITH BASIC MACHINE

NOT SHOWN ASSEMBLED

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.